



S4B

2020-newer Ford PIU Pressure-Mount Organizer

Thank you for purchasing CargoRAXX. See attached assembly and installation instructions. Please insert the clear access frame first, making sure the hooks go through the air vents and hook to the paneling closest to the hatch, so as not to rely on the vents. If they are solid inserts in a 2022 Ford PIU, please drill a hole in the inside front corner for the hook to go through. Your hardware is located inside the canister with the pressure pads (located inside the center cardboard piece inside the tray). Please reach out with any questions – I enclosed my card and my cell is 732-708-0077.

Best,

Roman Lesko
CargoRAXX

Thank you!
Roman Lesko

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com


CARGORAXX™

CLEAR ACCESS MODEL

ASSEMBLY GUIDE




Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com



CargoRAXX S4B
Clear Access Model

Note: Hooks on the front leg point forward.

Assembly Kit

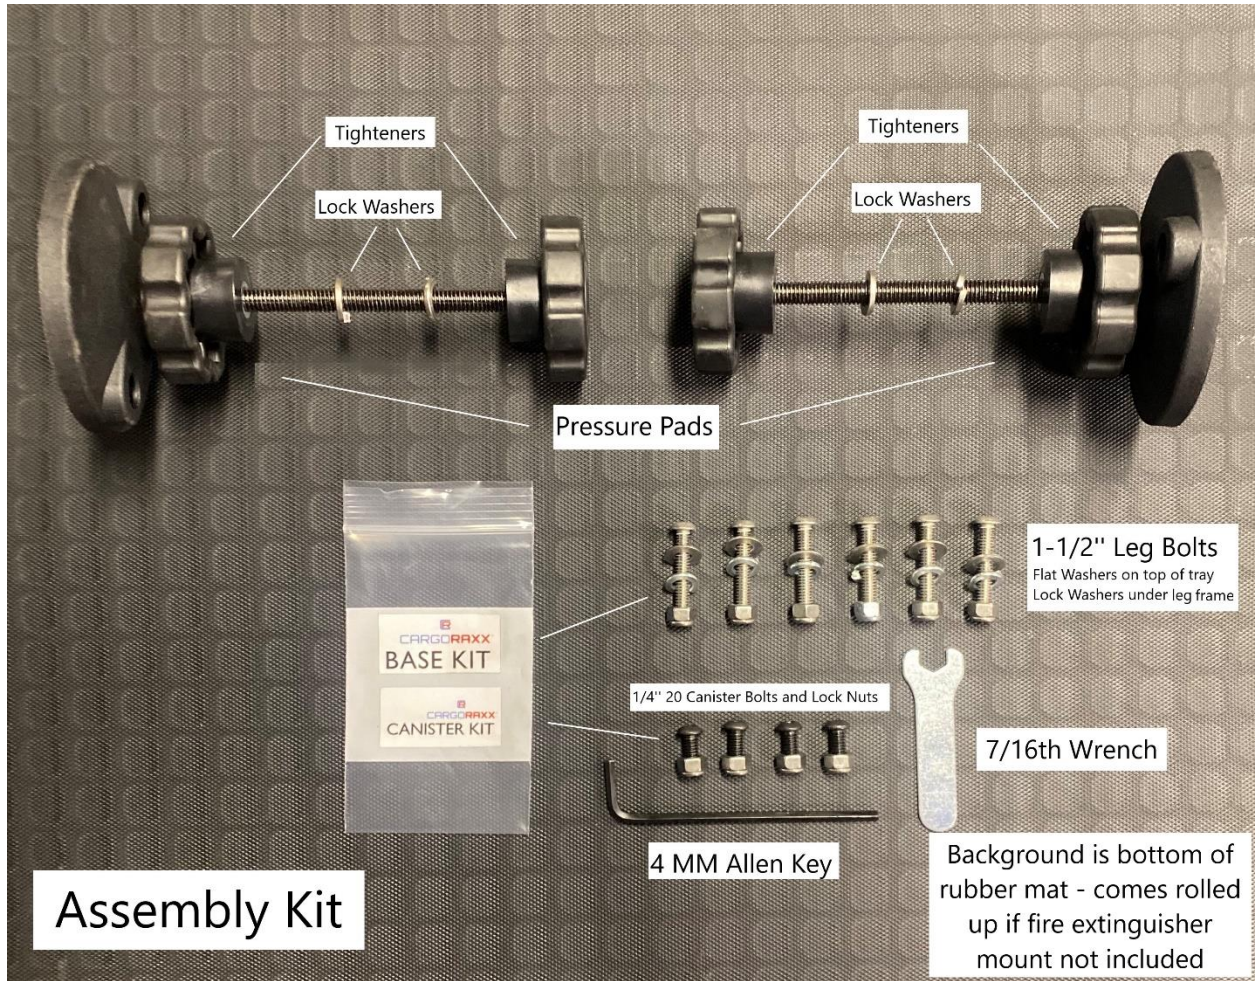

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

STEP 1

Merge the two half legs in the middle – the hooks should face towards you and silver rivet away from you.



Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

STEP 2

Insert spare tire bar into vehicle first, hooks pointing towards you, silver rivet away from you.


Proceed with caution as side windows are close to the ends of the frame.



Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

STEP 3

Hook the clear access frame through the air vent on both sides – either in the first divider of the vent or the 2nd – make sure the hook is as close to the end of the vent as possible so that it's secured using the paneling rather than just the vent insert.

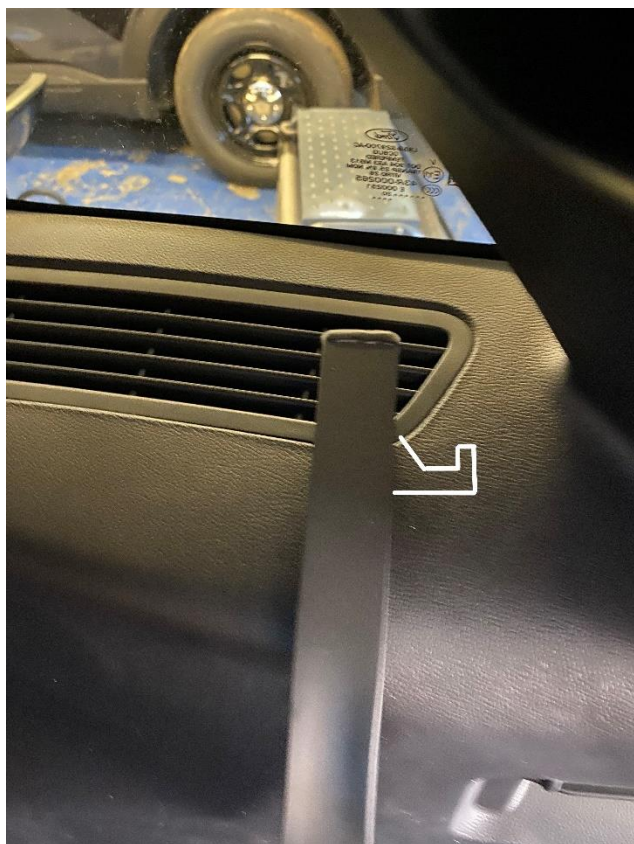

STEP 4

Install rear leg onto tray using three (3) 1-1/2" bolts. Make sure to install with **flat washer in tray and lock washer on the bottom of the leg frame.**



Use a 4 mm allen key and 7/16th wrench to secure (both included in kit).





STEP 5

Place pressure pads through the hole of the back leg (use lower hole if you have two options in order to get around Pro-Gard cargo barrier brackets) – make sure lock washers are between the fasteners and leg (see images on next page).

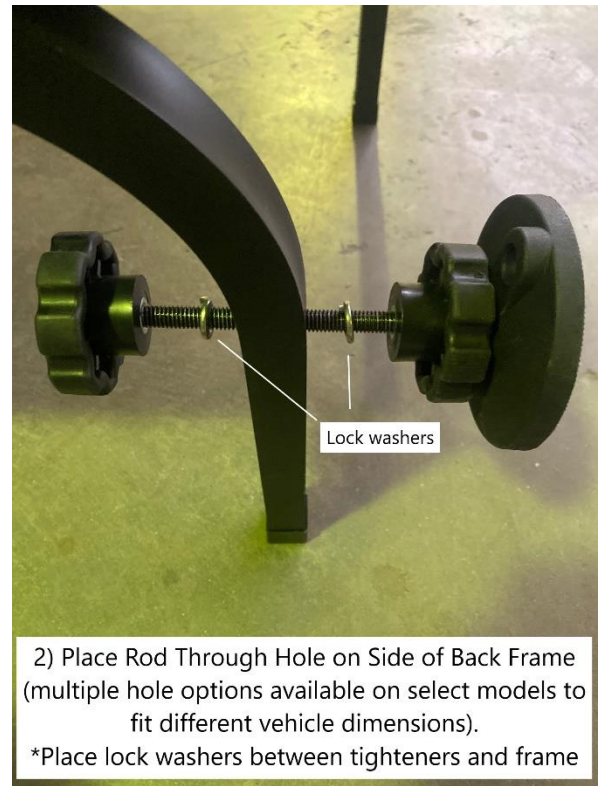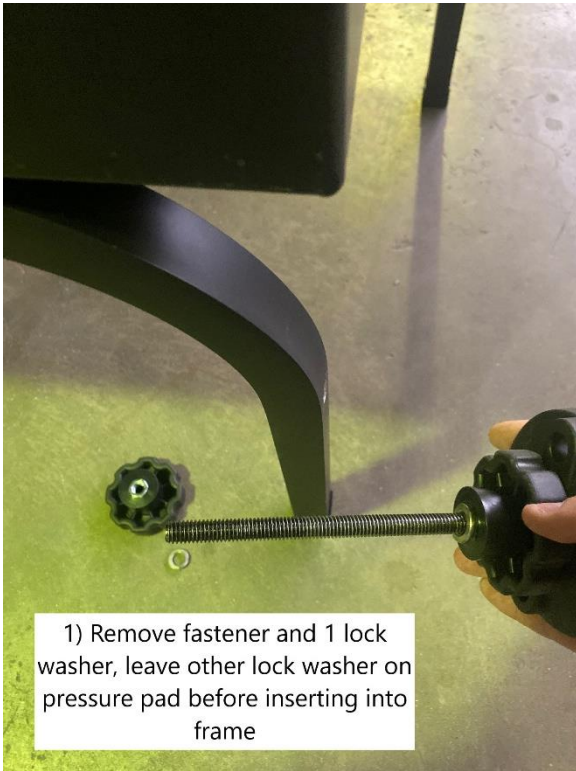


(Use lower hole location for pressure pads if applicable)

STEP 6

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com



Insert tray with leg into the vehicle over the spare tire leg, then line up the 4 Clear Access leg holes with the holes on the tray. Use 4 sets of the same hardware used to secure the rear leg for the Clear Access leg, outer holes first (much easier this way to get the bolt through the inner holes).

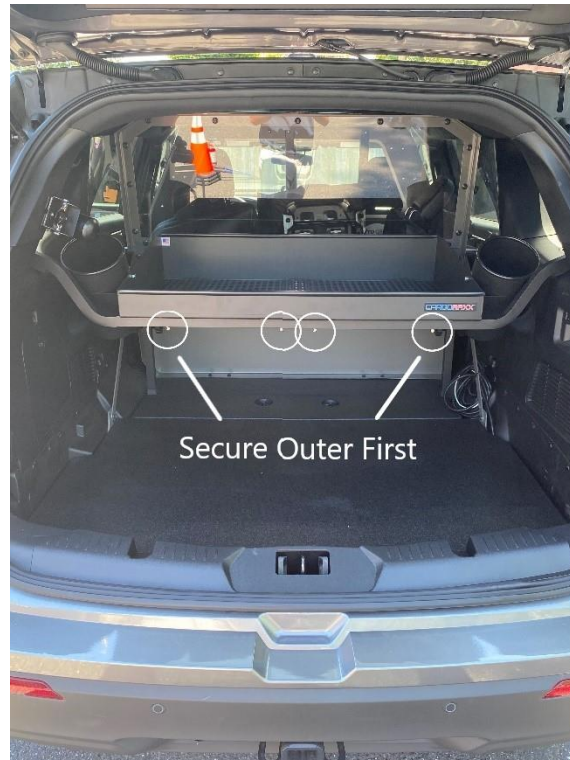

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

STEP 7

Loosen the fastener on the inside of the frame until the metal rod only has two or three threads showing on the inside. Press pressure pad against paneling and tighten fastener nearest to the pad towards the frame (right arrow in 2nd image). **(Rubber circle not necessary/included for clear access model).**

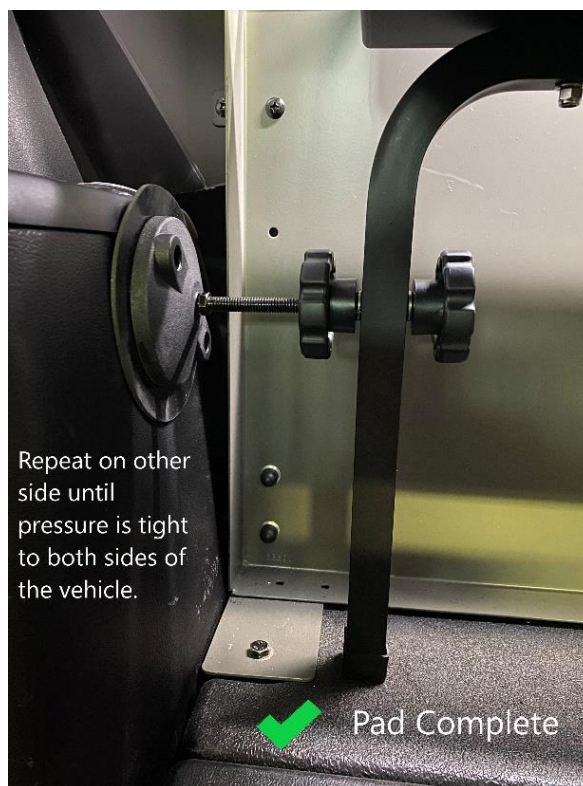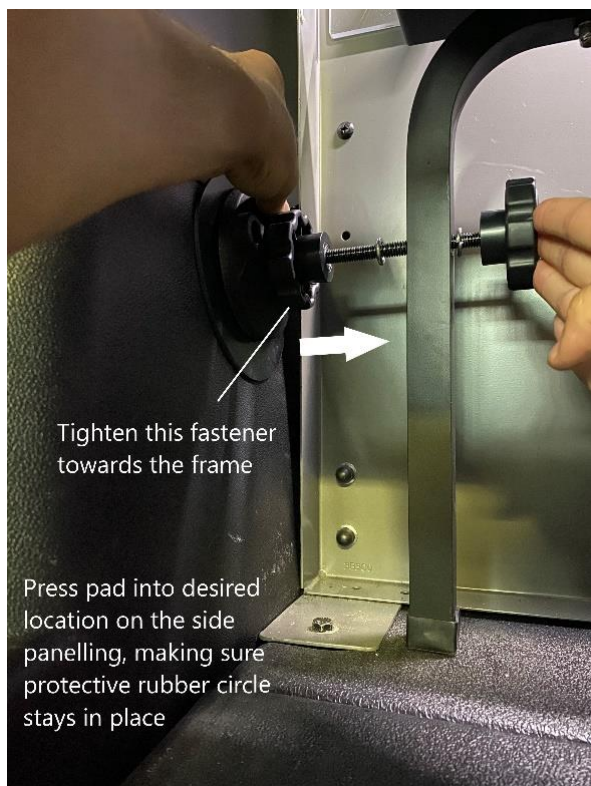

STEP 8

Insert rubber mat – glossy side up



Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

Canister Installation




1 – Insert bolts through holes from inside



2 - See holes for cylinders on the side of the tray



3 - Insert bolts into holes while securing from the inside

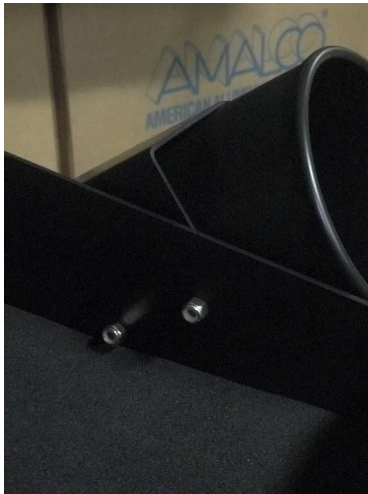


4 - Attach lock nuts



5 - Tighten the cylinder as much as possible with a 7/16 wrench and 4 mm allen wrench (included in kit)

Caution Tape Holder Installation

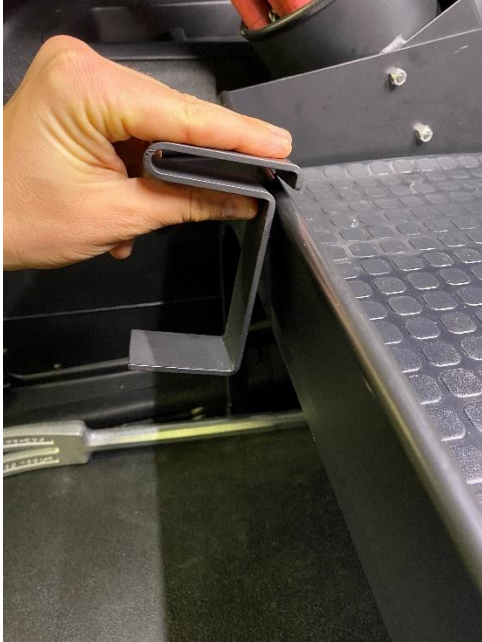

1 – Face caution tape holder down




2 – Snap the bend over the trim



3 – Press down with thumb to the final position as bend goes over the lip of the tray

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

Halligan Mount Installation

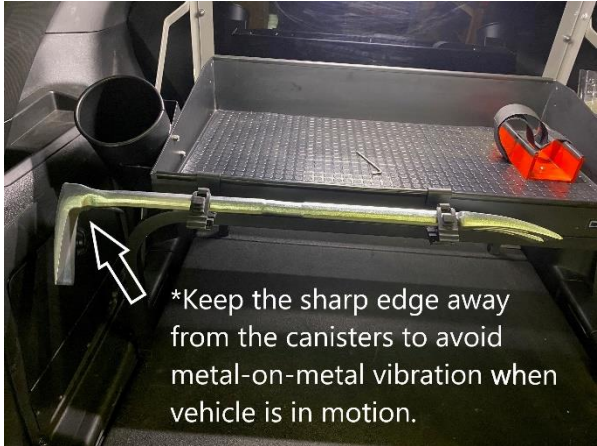

Questions or Feedback: Call 1-844-867-7299 or Email sales@cargoraxx.com