



TAH-LEVELER-1

FLOOR LEVELER INSTALLATION

Thank you for purchasing CargoRAXX Tahoe floor leveler. Please reach out with any questions – I enclosed my card and my cell is 732-708-0077.

Best,

Roman Lesko
CargoRAXX

Thank you!
Roman Lesko



TAHOE FLOOR LEVELER ASSEMBLY GUIDE




STEP 1

Attach brackets to floor leveler using the 6 flat-head screws provided – bends facing in.



STEP 2

Insert front brackets into vehicle under loosened factory bolts – should be loosened by T-50 Torque Wrench (image below representation of where bracket goes under plate).

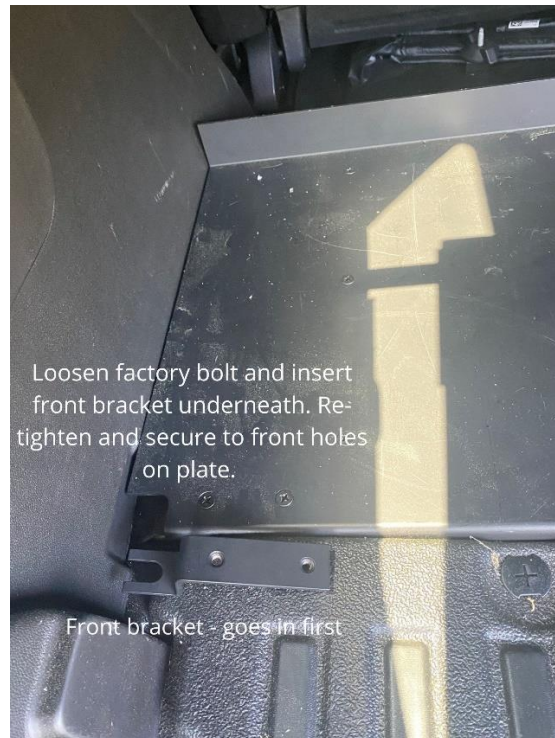

STEP 3

Tighten factory bolt w T-50 torque wrench and secure bracket w flat-head screws.



STEP 4

Cut through paneling underneath the back of the plate where the bracket holes are. There is a factory bolt thread underneath that should be used to secure the rear bracket to the floor. Use the 3/8 16 x 1.5" hex bolt and washer provided.

