



LB

Secured Lidded Rack

Thank you for purchasing our Secured Rack with Lid (LB). See attached assembly and installation instructions. Please attach one front bracket and the opposite rear bracket before inserting into vehicle. Do not attach the flare boxes until after the tray is fully installed. Once tray is in vehicle attach the other two brackets and drill through the hole locations in the paneling before drilling the larger 13/32" hole. Please reach out with any questions – I enclosed my card and my cell is 732-708-0077.

Best,

Roman Lesko
CargoRAXX

Thank you!
Roman Lesko

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com




LB SERIES – SECURED RACK ASSEMBLY GUIDE



Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

Hardware Guide

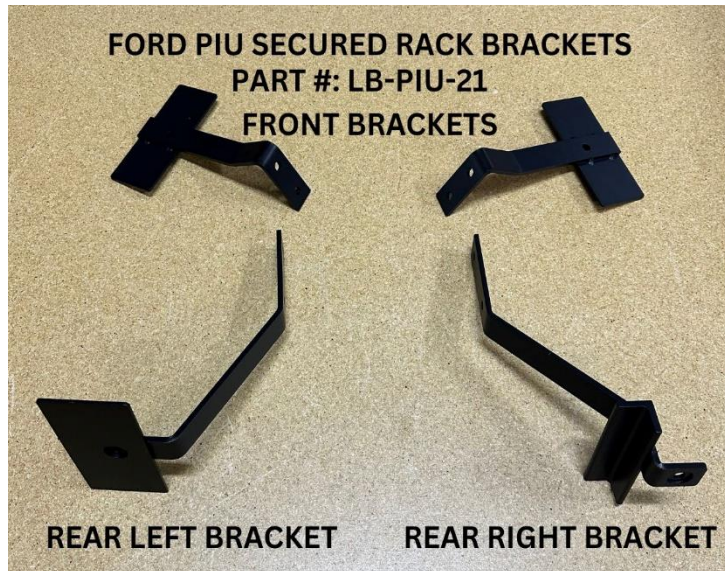

12x BOLTS – 1/4-20 X 3/4"
**BUTTON SOC CAP SCREW ZINC
PLATED**



**8x LOCK NUTS - 1/4-20 NYLON
STAINLESS STEEL LOCK NUTS**

**4x JACKNUTS: POP 8SJN
(310040) Jacknut (Molly) Insert;
1/4-20 UNC-2B,**

**(0.015 - 0.187 Inch Grip), Large
Flange H**

4 BLACK RUBBER

WASHERS FOR JACKNUTS

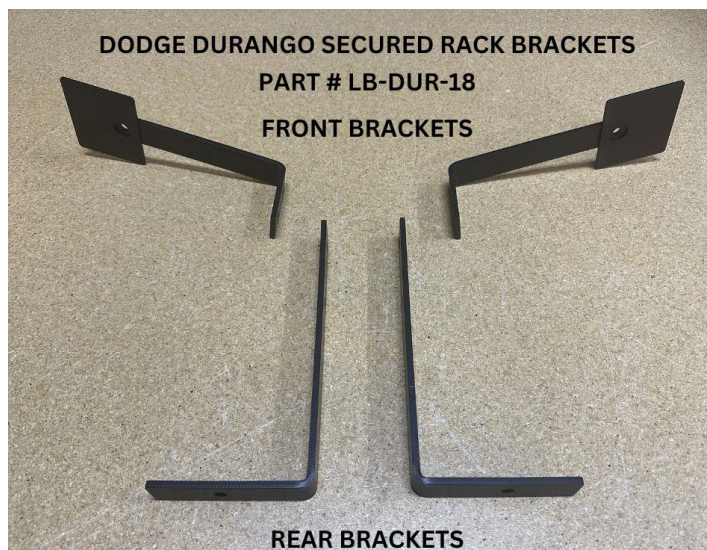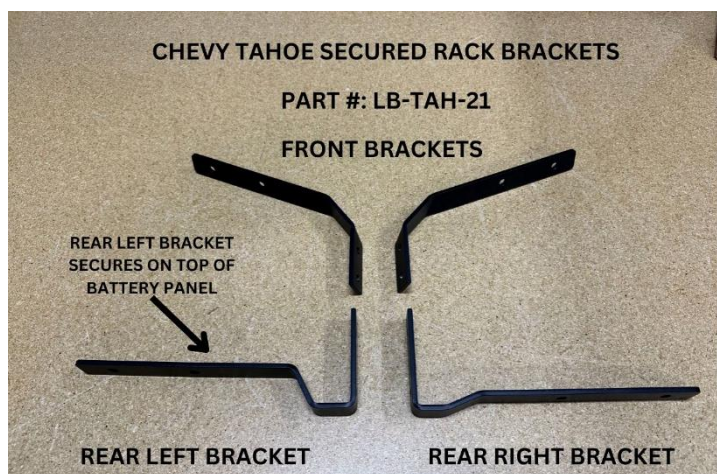

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

STEP 1 (SAME PROCESS AS NORMAL RACKS)

Attach the front left bracket and the rear right bracket to the tray as seen below. **Do not install flare boxes until the unit is hard-mounted in the car.**




STEP 2

Insert tray into vehicle carefully to not scratch panel or damage windows (please do not attach flare boxes until brackets are secured into vehicle).



The rear right bracket should rest in the pocket.

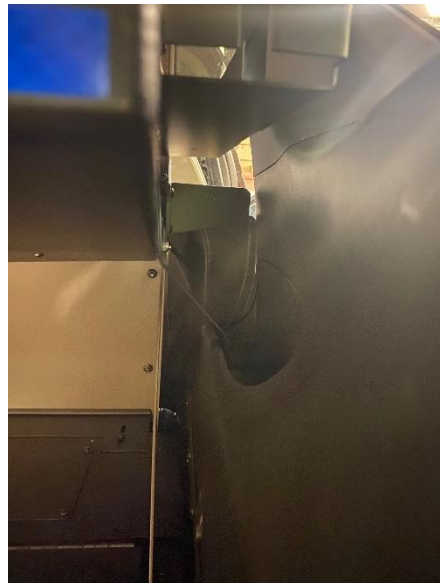

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com


STEP 3

Attach other the other two brackets to the tray and tighten with 4 mm allen wrench and 7/16" socket wrench.



STEP 4

Scribe all the hole locations or drill a 1/4" hole before moving unit and drilling a larger 13/32" hole.

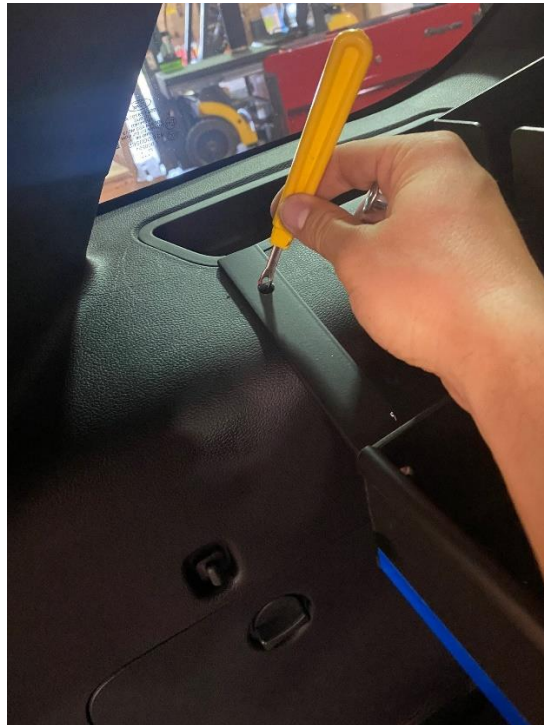

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com


STEP 5

Drill a 13/32" hole into the paneling (create a smaller pilot hole first for more precise location).



STEP 6

Fasten jacknut onto 1-1/2" bolt using friction wrench. Add black rubber washer.

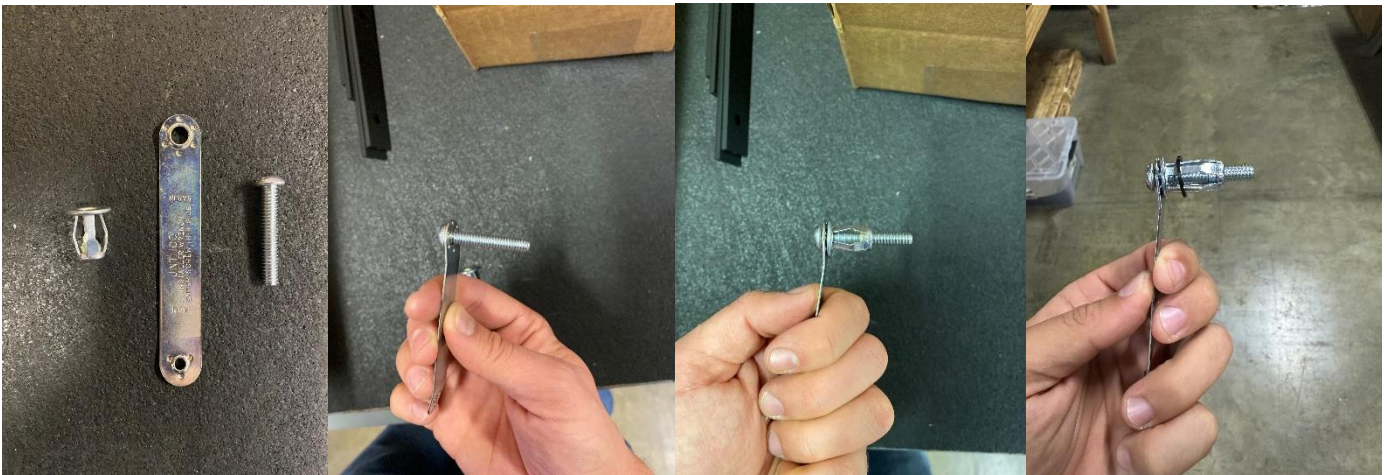

STEP 7

Press the rivet into the hole in the panel with washer between panel and rivet - drill the bolt tightly while the rivet is inside the panel and friction wrench is pressed down on rivet insert. This will cause the rivet to collapse and leave a threaded insert. Once you can't tighten anymore, remove the bolt with the drill and you are left with the insert.




STEP 8

Once you have all the rivet inserts secured, you can reinsert tray and tighten $\frac{3}{4}$ " bolts through the legs into the rivnuts. Installation is complete.



Completed Rivet

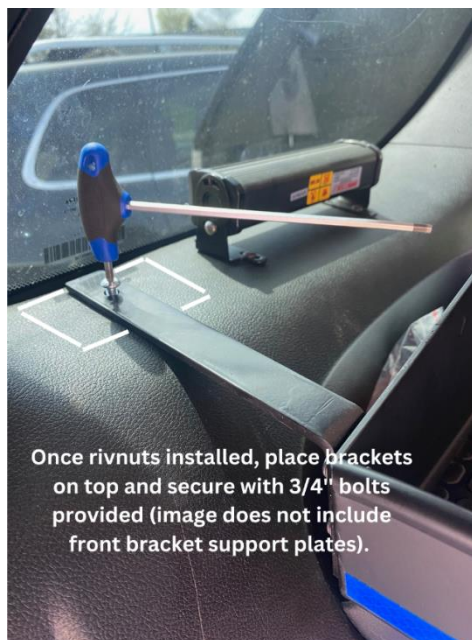

Once rivnuts installed, place brackets on top and secure with $\frac{3}{4}$ " bolts provided (image does not include front bracket support plates).

STEP 9

Insert rubber mat – glossy side up




Flare Box Installation

Attach flare box using bolts and lock nuts provided.



Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

Caution Tape Holder Installation

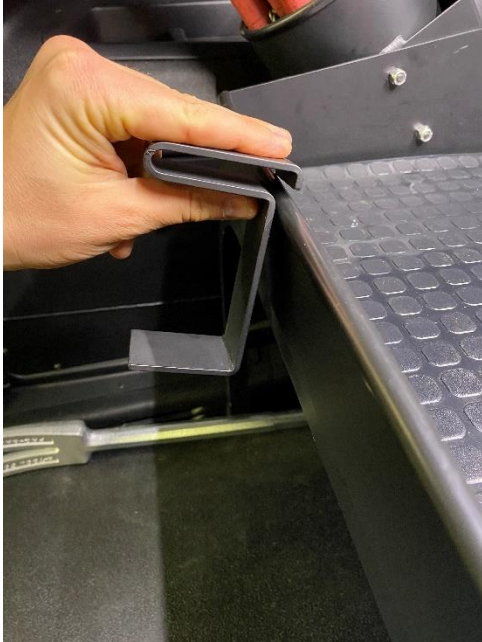

1 – Face caution tape holder down



2 – Snap the bend over the trim



3 – Press down with thumb to the final position as bend goes over the lip of the tray

Questions or Feedback: Call 1-844-867-7299 or
Email sales@cargoraxx.com

Halligan Mount Installation



Questions or Feedback: Call 1-844-867-7299 or Email sales@cargoraxx.com